

Tuff Tread


502 W. Montgomery STE 120
Willis, TX 77378
PH: (800)827-2017 FAX: (888)898-8974
www.TuffTread.com

How to Access the Inside of the Display Panel Treadmill Serial Numbers 10910 or higher

If you have any problems or questions, please call our technical support line: 800.827.2017

Before beginning any service on the inside of the display, be sure the treadmill is unplugged.

- ❑ First remove the four Allen bolts on the top edge of the display.

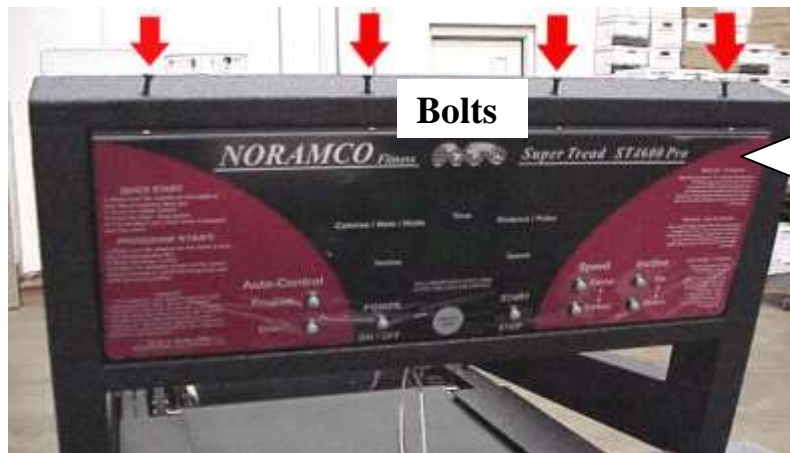

Use the stop magnet to help pull the upper corner of the display forward.

- ❑ Use a small flat-blade screwdriver, or a similar tool with a strong flat edge, to pry the display insert out of the display upright. Tip the display insert forward, being careful not to jerk the green ground wire that connects the display insert to the inside of the display upright.

